


Approval and Conformity

This mobile phone complies with the fundamental requirements of the R&TTE Directive 1999/5/EC for radio installations and telecommunication transmission devices and is suitable for the connection and operation in the respective country where the device was sold.

The declaration of conformity is available on the following website:

www.ivsgmbh.de

 The CE symbol confirms the conformity of the telephone with the 0700 above directive.

You can download the complete user guide as well as the declaration of conformity from our website

<http://www.ivsgmbh.de/de/support/downloadsauswahl/>

In case you need support during setup or usage of your mobile phone you will find the relevant contact details on the following website:

<http://www.primobydoro.com/support>

Internet:

www.ivsgmbh.de


IVS GmbH

Im Frauental 14 • 92224 Amberg

© IVS GmbH 2014 • All rights reserved

IVS QSGEN_Primo 405 by Doro - V 1.0

Activating the phone

Hold the read button  on the telephone for approx. 5 seconds to turn it on/off.

If the SIM card is valid but protected with a PIN code (Personal Identification Number), **Enter PIN** is displayed.

Enter the SIM PIN code and press **OK** ( upper left corner of keypad).

Delete with **Delete** ( upper right corner of keypad).

Setting the language

The default language of the telephone menu, messages and so on is determined by the SIM card used (**Automatic**). You can always switch

between the languages supported by the telephone.

1. Press **Menu**, scroll to **Settings** and press **OK**.

2. Select **Phone settings** and press **OK**.

3. Select **Language** and press **OK**.



4. Select a language from the list and press **OK**.

Setting time and date


1. Press **Menu**, scroll to **Settings** and press **OK**.

2. Select **Time and date** and press **OK**.

3. Select **Set home city** and press **OK**.

 


4. Select a city from the list using  and  and press **OK**.

5. Select **Set time/date** and press **OK**.

6. Enter the time (HH:MM) and press .

7. Enter the date (DD/MM/YYYY) and press .

8. Select **Set format** and press **OK**.

9. Set the time format (12 or 24 hours) with  and  and press .

10. Set the date format with  and  and press **OK**.


Making phone calls

1. Enter the phone number with the area code. You can delete digits with **Delete**.


2. Press  to dial. Press **Cancel** to cancel dialling.

3. Press  to end the call.

Tip:

For international calls, always enter a + symbol before the country code to be able to use the address book optimally in any country. Press the  button twice to enter an international area code.

Answering a call

1. Press  or **Answer** to accept the call or press **Reject** to reject the call (busy signal).

Alternatively, you can press  to reject the call directly.

2. Press  to end the call.

Creating an entry in the telephone book

1. Press **Menu**, scroll to **Phonebook** and press **OK**.

2. Select **Add new contact** and press **Add**.



3. Select whether you want to save the contact on the SIM card or in the telephone.

4. Enter a name for the contact.



5. Press .

6. Enter the telephone number including the area code.

7. Press .


8. As an option, you can select a different caller image for the contact using the keys  and . You have the choice between standard or an image saved as file in the telephone.

9. Press .


10. Optionally, you can select a different ring tone for the contact by using the keys  and .

11. Then press **Options**, select **Save** and press **Select**.

Tip:

For international calls, always enter a + symbol before the country code to be able to use the address book optimally in any country. Press the  button twice to enter the international area code +.

Emergency calls

If the telephone is switched on, you can make an emergency call at any time by entering the emergency number valid in the respective country and then pressing .

In some networks emergency calls are permitted even without a valid SIM card. For more information contact your network provider.


Note!


Please also note that since 2009 it is no longer possible to call the emergency number 112 in Germany without an activated SIM card. Credit is not required – however, the SIM card must be registered and activated.

The misuse of the emergency number 112 may be persecuted and punished with a fine.

Display status symbols

 Signal strength

 Battery charging status

 New entries in the call log (missed calls)


 An alarm time is set

 Bluetooth enabled


 Existing GPRS connection


 Headset connected

 USB connection

 MMS is being sent

 Only vibration

 Sound and vibration

 First vibration, then sound

 Unread SMS

 Unread MMS

 
 Indicates that a micro SD card is inserted.

Primo 405 by Doro

Quick Start Guide



Primo[™]
BY DORO

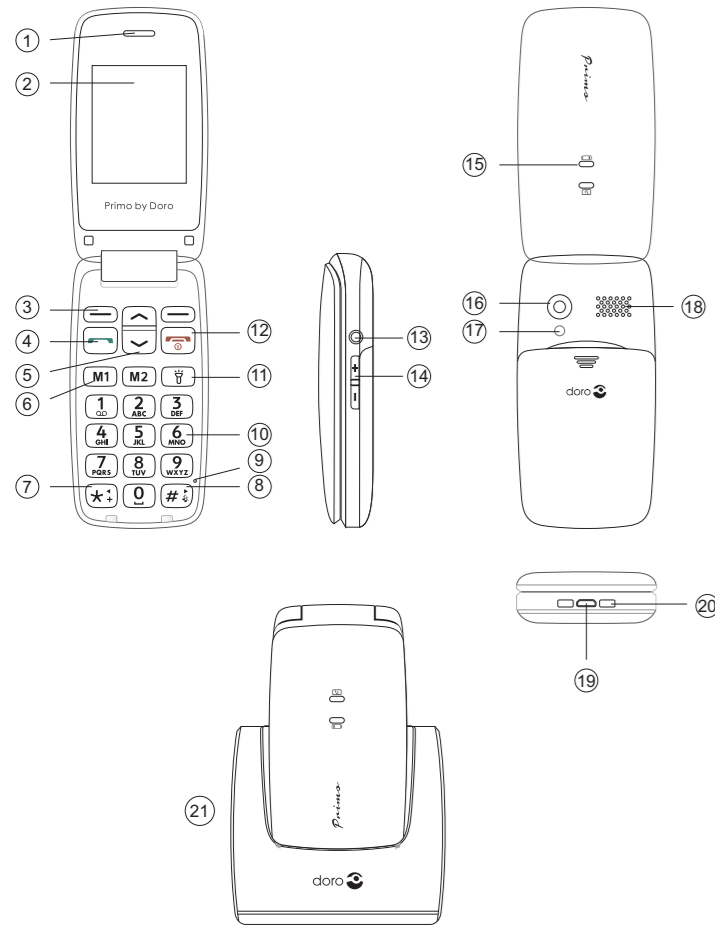

- 1. Receiver loudspeaker Making phone calls holding the cell phone to the ear
- 2. Display
- 3. Left soft key Selection of the main menu
- Right soft key Opening the telephone directory
- 4. Call button Dialling and answering call; opening the call log.
- 5. Arrow keys In idle state for opening the quick access list. for opening the message. Scrolling up and down in menus and lists.
- 6. Speed-dial buttons Speed-dialling of the numbers saved under M1 and M2 with one keystroke
- 7. * key In idle state: to enter: “*” / “+” / “P” / “W”; Input of text: input of special characters
- 8. # key In idle state: long keystroke to toggle between ring tone on/off; For inputs: shifting between input modes.
- 9. Microphone
- 10. Numerical keys In idle state: input of phone number; long keystroke on 1: calling the voice mail box (telephone number must be saved);
- 11. Torch button Switches the torch on/off
- 12. Exit key Exiting a call, returning to idle state; switching the phone on/off
- 13. Headset connector For standard headset with 3.5 mm phone jack

- 14. +/- keys Sets the volume of ring tone/loudspeaker
- 15. LEDs Notification of missed calls and received text messages Charging of battery
- 16. Camera lens
- 17. Flash LED / Torch
- 18. Loudspeaker For hands-free mode and ringing
- 19. Micro USB port For battery charger or connection to PC
- 20. Charging contact To charge the device in the charging cradle
- 21. Charging cradle To charge the telephone

 
 
Inserting the SIM card, memory card and rechargeable battery

IMPORTANT!


First switch the phone off and disconnect it from the battery charger before you remove the cover of the battery compartment.

The SIM card and memory card holder are located behind the rechargeable battery.

1. Remove the cover of the battery compartment by placing a thumb on the cover's ruffle on the rear of the telephone casing and pushing the cover downwards. If the rechargeable battery is inserted, remove it by lifting it on the notch at the top using a finger nail.

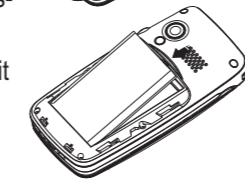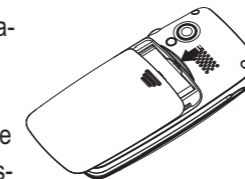


 2. Insert the SIM card by carefully pushing it under the metal bracket on the lower side. Make sure the contacts of the SIM card point downwards and the cut-off corner fits exactly in the recessed shaping of the holder. The contacts of the SIM card must not be scratched or bent. Try not to touch the contacts with your fingers.

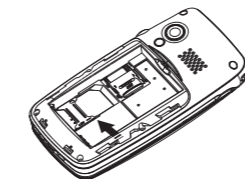

3. **Micro-SD card**
To use the performance features of your phone that require more memory, in particular photos, music etc., a micro SD memory card is needed. In your phone a 128 MB memory card is already installed.

 For replacing proceed as follows:
Slightly press onto card holder on the left side and carefully push it in towards the left hand casing edge. The memory card holder now can be folded up vertically. Remove the old memory card and place the new memory card in the black plastic holder in a form- locking manner. Make sure the contacts of the memory card point downwards and the "lug" is placed in the marked area. The contact of the memory card must not be scratched or bent.

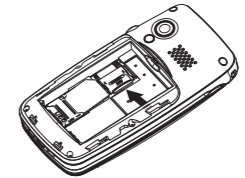

4. Insert the rechargeable battery by pushing it into the battery compartment ensuring that the three contacts on the front touch the three spring contacts on the bottom in the battery compartment.
5. Replace the cover and push it upward using gentle pressure with the thumb until it snaps securely into place again.

IMPORTANT!

Use memory cards that are compatible with this device only. Compatible card types are: micro SD, micro SDHC. Incompatible cards may damage the card itself, the device as well as the data saved on the card.

Charging

CAUTION

Use rechargeable batteries, battery chargers and accessories that are approved for this specific model only. Connecting other accessories involves risks and may lead to the lapse of the approval of the device type and the loss of warranty.

When the battery performance is low, the empty battery symbol flashes to indicate the battery state and an alarm signal will sound. To recharge the battery, connect the mains adapter to the micro USB connector on the bottom side of the phone. Alternatively, you can place the telephone into the charging cradle connected to the mains adapter.

When the battery charger is connected to the phone, the red charging LED is on. The battery charge status moves when the battery is charging (visible in the upper right corner of the display). A complete charging process of the rechargeable battery takes approximately 3 hours. When the battery is fully charged the animation of the battery charging status stops.

Note!
To save energy, the lighting goes out after a while. Press any key to activate the display lighting.
The full battery power is reached once the rechargeable battery has been charged 3 - 4 times. The battery performance decreases over time. This means calling and stand-by times become shorter with regular use.