


## Declaration of Conformity

We declare that Primo 215 by Doro conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE).




 The CE symbol confirms the conformity of the telephone with the above directive.

You can download the complete user guide as well as the declaration of conformity from our website <http://www.ivsgmbh.de/de/support/downloadsauswahl/>

In case you need support during setup or usage of your mobile phone you will find the relevant contact details on the following website:  
<http://www.primobydoro.com/support>

Internet:  
[www.ivsgmbh.de](http://www.ivsgmbh.de)  
IVS GmbH  
Im Frauental 14 • 92224 Amberg  
© IVS GmbH 2014 • All rights reserved  
IVSQSGEN\_Primo 215 by Doro - V 1.0

## Activating the phone


Hold the red button  on the telephone for approx. 4 seconds to turn it on/off.  
If the SIM card is valid but protected with a PIN code (Personal Identification Number), **Input PIN** is displayed. Enter the PIN code and press **OK** ( upper left corner of keypad). Delete with **Clear** ( upper right corner of keypad).




## Setting the language

The default language for the phone menus, messages etc. is determined by the SIM card. You can change this to any other language supported by the phone.



1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Select **Phone** and press **OK**.
3. Select **Language** and press **OK**.
4. Select a language from the list and press **OK**.

## Setting time and date




1. Press **Menu**, scroll to **Settings** and press **OK**.
2. Select **Phone** and press **OK**.
3. Select **Time and date** and press **OK**.
4. Select **Set home city** and press **OK**.
5. Select a city from the list and press **OK**.
6. Select **Set time/date** and press **OK**.
7. Enter the time (HH:MM) and press .

8. Enter the date (DD/MM/YYYY) and press .
9. Using  and , select whether **Daylight saving** should be turned on or off and press **Save**.

## Making a call

1. Enter the phone number including the area code. Delete with **Clear**.
2. Press  to dial. Press **Abort** to cancel dialling.
3. Press  to end the call.

## Receiving a call

1. Press  or **Answer** to accept the call or press **Reject** to reject the call (busy signal). You can also press  to reject the call directly.
2. Press  to end the call.

## Emergency button



### IMPORTANT!

Always inform recipients in number list that they are listed as your emergency contacts.

### CAUTION

When an emergency call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.















Using the emergency call button, you can easily call pre-set numbers.

- The emergency call function must be activated in the "SOS Setting" menu if you want to use it. In the complete user guide (available on our website), you can find information on how to activate this function and enter the contacts in the number list and edit the emergency call SMS.
- Press the emergency call button on the back of the telephone **3 times** quickly. A loud signal will sound. The seconds are counted down on the display (delay time). During this time, you can prevent potential false alarms by pressing  or **Abort**.
  - The telephone then sends an SMS text message to all telephone numbers in the emergency call list if the emergency SMS is activated in the SOS settings.
  - The telephone then dials the first telephone number in the list. If the call is not accepted within 25 seconds, the next number is dialed. The emergency call sequence is repeated three times or until the call is accepted or until  is pressed.

### IMPORTANT

- After sending the emergency call SMS, the numbers in the number list are called sequentially.

## Display status symbols

-  Signal strength
-  Battery level
-  New entry in the call list (Missed call)
-  Keypad locked
-  Alarm active
-  Bluetooth on
-  Headset connected
-  USB connection
-  Ringer on
-  Ringer off
-  Vibration only
-  Ringtone and vibration
-  First vibration, then ringtone
-  Unread SMS

# Primo 215 by Doro

Quick Start Guide



*Primo*  
BY DORO



 
 
1. Switch for keylock
2. Torch LED
3. Earpiece Socket for 3.5mm standard earphone
4. UP/DOWN keys In standby: Press to open the Shortcut key list.  
 Press to open the Messages menu.  
Press to navigate in menus and lists
5. Left Soft Key Press it to enter the main menu
6. Right Soft Key Press it to open the phonebook
7. Dialing key Press to dial a number or to accept a call; Press it once to enter Call Log.
8. End key Press to cancel a phone call; Press to return main standby page; Press & hold to turn ON/OFF the phone
9. Number keys In standby mode, press to input numbers;  
Long press key 1: Making a call to the voice mailbox (telephone number must be stored);  
In editing mode, press to input

10. \* key numbers or characters.  
In standby mode, short press to input “\*” / “+” / “P” / “W”;  
In editing mode, press to input special characters
11. # key In standby mode, long press to switch between Normal and Silent mode  
In editing mode, press to switch input methods
12. Micro-USB port Connection for charger or PC
13. Cradle charging contacts
14. Switch for torch
15. SOS key
16. Speaker

### Installing the SIM card, memory card and the battery


The SIM and memory card holder's are located inside the battery compartment.

1. Remove the cover from the battery compartment by sliding your fingernail into the small notches on the side of the bottom of the phone and pulling the cover upward.  
If the battery is installed, slide your fingernail in the notch next to the lower end of the battery and lift one side of the battery to remove it.
2. Insert the SIM card by carefully sliding it beneath the metal bracket. Make sure that the contacts on the SIM card are facing down and the cut-off edge is aligned with the depressed shape of the bracket. The contacts of the SIM card must not be scratched or bent. If possible, do not touch the contacts with your fingers.

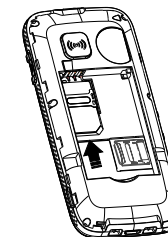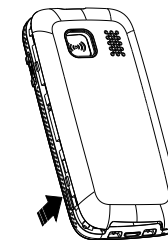


3. **Micro-SD card**  
*To use the storage-intensive features of your telephone, in particular sounds, etc., a micro-SD card must be used.*

 This is how to insert the memory card into the slot: Press lightly on the card holder and push it carefully toward the right edge of the casing. The memory card bracket can now be flipped up vertically. Place the memory card positive-locking into the black plastic bracket. Make sure that the memory card contacts are facing down and that the "nose" is placed in accordance with the marked area (see figure). The contacts of the memory card must not be scratched or bent. Push the metal bracket back down, pressing him flat and slide it away from the edge of the housing until it snaps into place.

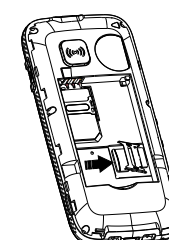

 4. Insert the battery by sliding it into the battery slot with the contacts facing to the upper left.
5. Replace the cover and press all the way around it so it is closed on all sides.

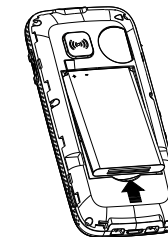

### CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

### IMPORTANT!

Use only compatible memory cards for use with this device. Compatible card type: microSD, microSDHC. Incompatible cards may damage the card and the device and corrupt data stored on the card.