












 
# Primo 305 by Doro

Quick Start Guide












Primo™  
BY DORO



## Icons in status bar

-  Signal strength
-  Battery status
-  Keylock activated
-  Alarm time programmed
-  Bluetooth activated
-  Headset connected
-  MMS sent
-  Profile "General" activated
-  Profile "Silent" activated
-  Profile "Outside" activated
-  Unread SMS/MMS
-  SD card inserted




## Menu icons

-  Multimedia (Camera / Video recorder / Image viewer/ Video player/ File manager)
-  Phonebook (Contacts)
-  Call log
-  Settings
-  Messaging (SMS/MMS)
-  Calendar
-  FM Radio
-  Extras (Torch / Alarm / Calculator)
-  Bluetooth


 

## Making a call

- Enter phone number and prefix.  
After pressing the first number all names from the phonebook are displayed that start with one of the letters on that numerical button. This can be used for quick search of saved numbers. Press ▼ to select a displayed name.
- Press  to make a call.
- Press  to end the call.

## Answering a call

- Press  or **Answer** to answer the call, or press  **Reject** to reject the call (busy signal).
- Press  to end the call.

## Switch telephone on

Press and hold the red button  for 4 seconds to switch the telephone on/off. If the SIM card is locked with a PIN code (Personal Identification Number), then the display shows **Enter PIN** Enter the SIM PIN code and press **OK** ( top left on the keypad). To delete press **Delete** ( top right on the keypad).

## Setting the language


- Press **Menu**, go to **Settings** -> **Phone settings** -> **language** and press **OK**.
- Select a language from the list and press **OK**.

## Set time and date

- Press **Menu**, go to **Settings** -> **Phone settings** -> **Time and date** and press **OK**. Enter the time (HH:MM) and press ▼.
- Select **Set time/date** and press **OK**. Enter the time (HH:MM) and press ▼.
- Enter the date (TT/MM/JJJJ) and press ▼.
- Press **Option** -> **Select** and set **Daylight saving** (summer time) to on/off.
- Finally press **Option** -> **Save**.

## Approval and Conformity

This mobile phone complies with the fundamental requirements of the R&TTE Directive 1999/5/EC for radio installations and telecommunication transmission devices and is suitable for the connection and operation in the respective country where the device was sold.

 The conformity of the telephone with above Directive is confirmed by the CE mark.

You can download the complete user manual and the declaration of conformity from the following website:


<http://www.ivsgmbh.de/de/support/downloadsauswahl/>

Internet:  
[www.ivsgmbh.de](http://www.ivsgmbh.de)

IVS GmbH  
Im Frauental 14 • 92224 Amberg  
© IVS GmbH 2014 • All rights reserved  
IVSUMGER\_Primo 305 by Doro - V 1.0



## Controls

 
- Speaker**  
Phone with the mobile phone at the ear.
- Navigation buttons**  
For navigating in menus and text input. In addition by default quick access (modifiable, see user manual).  
Up (▲): Enter camera mode  
Down (▼): Write SMS  
Left (◀): Enter alarm menu  
Right (▶): Enter ring tone menu.
- Left softkey**  
Enter the main menu.
- Call button**  
Dial and answer calls; open call history.
- Numerical buttons**  
In standby mode: Enter phone number; press and hold 1: Call to voicemail box (phone number must be stored); enter numbers and letters. Pressing a number in standby mode displays all names in the phonebook starting with one of the letters on the button.
- \* button (additional function)**  
In standby mode: **Menu** (left softkey ) , followed by \* button activates/deactivates keylock; for text entries: Open table with special characters.

- 0 button (additional function)**  
In standby mode: press and hold to enter "+", "p" and "w".
- Central button**  
In standby mode: Open main menu; in menus: **OK**.
- Right softkey**  
In standby mode: Open phonebook; press and hold: torch on/off.
- End button**  
End call; return to standby mode; press and hold in standby mode: switch telephone on/off.
- # button (additional function)**  
In standby mode: Press and hold to switch ring tone on/off. When entering numbers and letters: change input mode.
- Camera lens**
- Hands-free speaker and ringing**
- Torch LED**
- Headset jack** for 3.5mm standard headset.
- Micro USB port**  
Charging port or connect to PC.

## Insert SIM card, memory card and battery

The SIM card and memory card holders are located under the battery.


- Carefully press with your thumb on the rear casing cover and move it up. Lift the cover off. In case the battery is inserted, lift it with your fingernail and remove it.
- Insert the SIM card under the metal bracket. Ensure that the SIM card contacts face down and the chamfered corner matches the bracket.



The SIM card contacts are not to be scratched or bent. Do not touch the contacts with your fingers

- microSD memory card**  
*For using the high storage features of your telephone, particularly for photos, audio, etc. you need to insert a microSD memory card.*

 Insert the memory card in the slot: slightly press on the card holder and move it carefully up. The memory card holder can be flipped open. Place the memory card level in the black plastic holder.



Ensure that the contacts of the memory card face down and that the projection matches the marked area. The memory card contacts are not to be scratched or bent. Flip the holder down and lock.

- Insert the battery in the battery compartment, with the contacts top left.
- Replace the cover and carefully press down with your thumb until it clicks in place.

## CAUTION

Only use batteries, chargers and accessories approved for this model. Connecting other accessories from third party suppliers can be hazardous and can void the operating permit for the telephone as well as the warranty.

## IMPORTANT

Only use compatible memory cards. Compatible card types: microSD, microSDHC. Incompatible cards can damage the card, the telephone and the saved data.